


Leg Extension/Leg Curl

# **OWNER'S MANUAL**

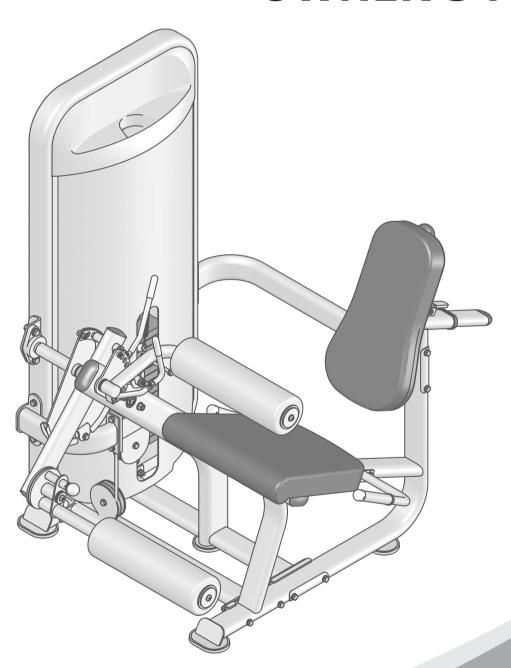

### ! CAUTION

Read all precautions and instructions in this manual before using this equipment

# ! CAUTION

Read all precautions and instructions in this manual before using this equipment.

# **Table Of Contents**

Important Safety Instructions 3
Instructions 4
Parts List 5
Exploded View 6
Measurement Guide 7
Assembly Instructions 8
Assembly 9
Exercise Instructions 17
Specifications 17
Maintenance Schedule 18
General Maintenance Information 19
Weight Training Tips 20

# **Important Safety Instructions**

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- \* Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.
- \* Do not allow children on or near the equipment.
- \* Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- \* Wear proper exercise clothing and shoes for your workout----no loose clothing.
- \* Be careful when getting on or off the equipment.
- \* Do not overexert yourself or work to exhaustion.
- \* If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- \* Never operate the unit when it has been dropped or damaged.
- \* Never drop or insert anything into any opening in the equipment.
- \* Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- \* Frayed or worn cables can be dangerous and may cause injury.

  Periodically check these cables for any indication of wear.
- \* Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- \* Do not attempt to lift more weight than you can control safely.
- \* Do not use the equipment outdoors.

# **Personal Safety During Assembly**


- \* Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- \* Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

# Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

# **Tools Required**

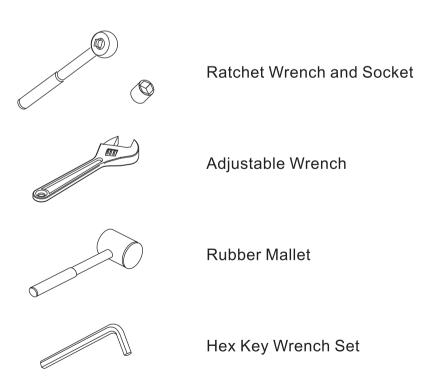

# Parts List


# NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

Item No.	Description		Item No.	Description	Qty
1	Weight Stack Frame	1	50	Plastic Tube Guide	2
2	Seat Pad Frame	1	51	Hand Cushion	1
3	Curl Arm Adjustment, Assy	1	52	Grip Φ30*Φ22*270	2
4	Extension Arm Adjustment, Assy	1	53	Plug RT 40*80	3
5	Cable Cam	1	54	Separate Cap Φ17*10.5	3
6	Guide Rod	2	55	Socket Head Cap Screw M8*20	3
7	Front Frame	1	56	Hex Head Bolt M10*115	4
8	Bottom Cross Brace	1	57	Hex Head Bolt M10*110	6
9	Rear Brace	1	58	Hex Head Bolt M10*105	4
10	Adjustable Plate	1	59	Hex Head Bolt M10*25	4
11	Adjustable Plate	1	60	Hex Head Bolt M10*20	2
12	Ext/Curl Arm	1	61	Hex Head Bolt M10*45	1
13	Ankle Roller Frame	1	62	Hex Head Bolt M10*50	8
14	Side Frame	1	63	Hex Head Bolt M10*65	8
15	Handle	1	64	Button Head Cap Screw M10*25	2
16	Back Pad	1	65	Flat Head Cap Screw M10*25	2
17	Big WasherΦ63.5*4	2	66	Pan Head Phillips Screw M8*55	1
18	Seat Pad	1	67	Hex Head Bolt M8*40	2
19	Weight Stack Base	2	68	Socket Head Cap Screw M8*25	1
20	Adjustable Support	1	69	Flat Head Cap Screw M5*10	1
21	Adjustment Bush	1	70	Pan Head Phillips Screw M5*15	8
22	Back Pad Frame	1	71	Nylon lock Nut M10	27
23	Lid PlateФ38*Ф10.5*4	4	72	Nylon lock Nut M8	5
24	Pin For Extension/ Curl	1	73	Washer Φ11*Φ20*1.5	70
25	Pin For Thigh Pad Assy	1	74	Washer Ф18*Ф9*1.5	8
26	Pop Pin	1	75	M12*40 Hex Head Bolt	2
27	Thigh Pad Frame Assy	1	76	FOAM	2
28	Pin Link Plate	4	77	Bush of Rolling Pad	4
29	Long Adjustment Bush	1	78	Hex Head Bolt M12*80	2
30	Pulley Prevent Bracket	1	79	Socket Head Cap Screw M5*20	4
31	Top Plate	1	80	Washer Φ5.5*Φ10*1	8
32	Spring	1	81	Nylon lock Nut M5	4
33	Selector Pin W/Coil	1	82	Nylon lock Nut M12	4
34	Pillow Block BearingUCFL205-25	2	83	Washer Φ13*Φ24*2	8
35	Plug RT50*100	1	84	Socket Set Screw 10-32*3.2	8
36	Bottom Front Shroud	1	85	Plug RT 30*70	3
37	Bottom Rear Shroud	1	86	Ф25.4 Ring	2
38	Top Front Shroud	1	87	Φ25.4 End Cap	2
39	Top Rear Shroud	1	88	Oval Fixed Plate	3
40	Guide Rubber BumperФ25*Ф21*28	4	89	Bushing Ф10*Ф14*20	1
41	Yellow GripΦ19*Φ14*70	2	90	Spacer Ф16*Ф12.2*12.5	4
42	M10*55 Hex Head Bolt	2	91	U-Style Tapped Hole Nut M5	4
43	4.5" Pulley	5	92	Hex Head Bolt M10*135	1
44	3.5" Pulley	1	93	Hex Head Bolt M10*190	1
45	Cable	1	94	Hex Head Bolt M10*50(Whole Screw)	2
46	Bushing Ф38*Ф25.4*18	6	95	Hex Key S=6	1
47	BushingΦ16*Φ12*8	4	96	Hex Key S=4	1
48	Weight Rubber Bumper	2	97	Lube	1
49	Foot Pad	5			$\overline{}$

<sup>!</sup> There are two configuration of weights: 250LBS(sixteen 15LBS Weight Plate) and 170LBS(sixteen 10LBS Weight Plate), please see following form for details.

# Exploded View

# **Measurement Guide**

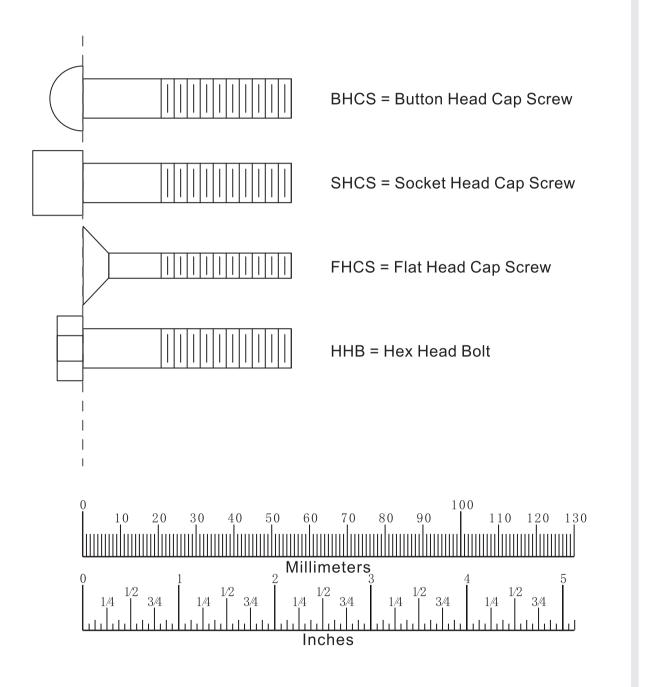

# **Assembly Instructions**

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.



### Note

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

# Step 1

1. Attach the Bottom Cross Brace (#8), the Front Frame (#7) to the Weight Stack Frame (#1) using:

four M10\*105 HHB (#58)

eight Φ20\*Φ11\*1.5 Washer (#73)

four M10 Nylon lock Nut (#71)

2. Attach the Rear Brace (#9) to the Weight Stack Frame (#1) using: two M10\*65 Hex Head Bolt (#63) four Φ20\*Φ11\*1.5 Washer (#73) two M10 Nylon lock Nut (#71)


3. Attach the Seat Pad Frame (#2) to the Front Frame (#7), the Bottom Cross Brace (#8) using:

two Oval Fixed Plate (#88) two M10\*110 HHB (#57) six M10 Nylon lock Nut (#71)

four M10\*115 HHB (#56) twelve Φ20\*Φ11\*1.5 Washer (#73)

4. Attach the Seat Pad Frame (#2), the Rear Brace (#9) to the Weight Stack Frame (#1) using:

one Oval Fixed Plate (#88) four Φ20\*Φ11\*1.5 Washer (#73) two M10\*110 HHB (#57) two M10 Nylon lock Nut (#71)

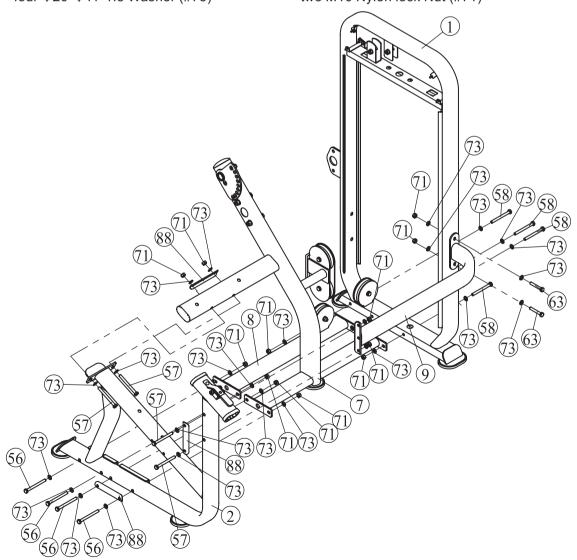

### Step 2

1. Attach the Long Adjustment Bush (#29), the Ext/Curl Arm (#12), two Pillow Block Bearing (#34) to Cable Cam (#5) shaft two end.

2. Attach two Pillow Block Bearings (#34) to the Front Frame (#7), the Weight Stack Frame (#1) using:

four Spacer (#90) two M12\*40 HHB (#75) two M12\*80 HHB (#78) eight Φ13\*Φ24\*2 Washer (#83)


four M12 Nylon lock Nut (#82)

3. Fix the Cable Cam (#5) shaft two end. using:

one Adjustment Bush (#21) two Φ20\*Φ11\*1.5 Washer (#73) two Φ38\*Φ10.5\*4 Lid Plate (#23) two M10\*25 Hex Head Bolt (#59)

4. Attachthe Side Frame (#14) to the Weight Stack Frame (#1) and the Front Frame (#7). using:

two M10\*65 HHB (#63) six Ф11\*Ф20\*1.5 Washer (#73) two M10\*20 HHB (#60) two M10 Nylon lock Nut (#71)

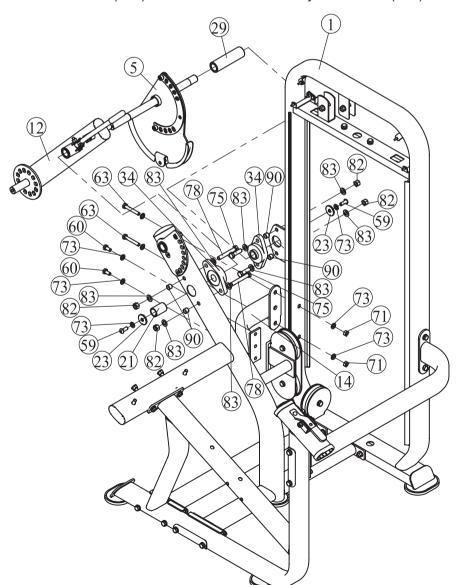


### Step 3

- 1. Attach the Thigh Pad Frame Assy (#27) to the Front Fram (#7). using: one Φ38\*Φ10.5\*4 Lid Plate (#23) one Φ11\*Φ20\*1.5 Washer (#73) one M10\*25 HHB (#59)
- 2. Attach the Ankle Roller Frame (#13) to the Ext/Curl Arm (#12), using: one Φ38\*Φ10.5\*4 Lid Plate (#23) one Φ11\*Φ20\*1.5 Washer (#73) one M10\*25 HHB (#59)
- 3. Attach two FOAM (#76) to the Ankle Roller Frame (#13) and the Thigh Pad Frame Assy (#27) using:

four Bush of Rolling Pad (#77) two  $\Phi$ 63.5\*4 Big Washer (#17) two  $\Phi$ 11\* $\Phi$ 20\*1.5 Washer (#73) two M10\*25 BHCS (#64)

- 4. Attach the Handle (#15) to the Seat Pad Frame (#2) using:
  two M10\*110 HHB (#57)
  six Φ11\*Φ20\*1.5 Washer (#73)
  one M10\*65 HHB (#63)
  three M10 Nylon lock Nut (#71)
- 5. Attach the Back Pad Frame (#22) to the Seat Pad Frame (#2) using: one M8\*25 SHCS (#68)
- 6. Attach the Back Pad (#16) to the Back Pad Frame (#22) using: two M10\*55 HHB (#42) two Φ11\*Φ20\*1.5 Washer (#73)
- 7. Attach the Seat Pad (#18) to the Seat Pad Frame (#2), using: two M10\*65 HHB (#63) two Φ11\*Φ20\*1.5 Washer (#73)

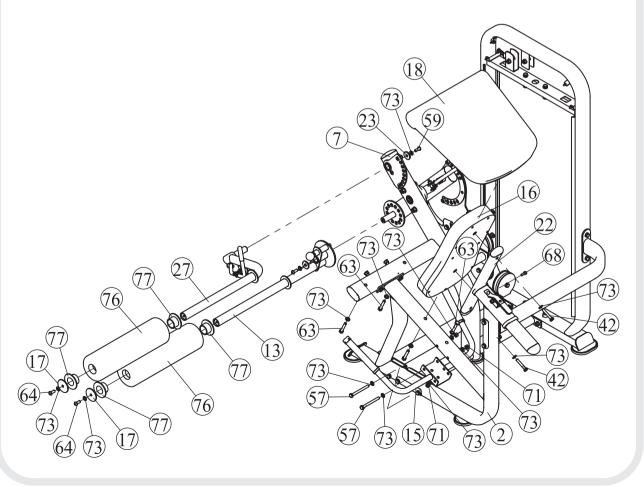


# Step 4

- 1. Attach two Weight Stack Base (#19), two Weight Rubber Bumpers (#48), two Guide Rods (#6) to the Weight Stack Frame (#1).
- 2. Attach sixteen Weight Plate.
- 3. Attach One Top Plate (#31) and the Selector Pin W/Coil (#33).
- 4. Fix two Guide Rods (#6) to Weight Stack Frame (#1) using: two M10\*50 (Whole Screw) HHB (#94) two Φ11\*Φ20\*1.5 Washer (#73)
- 5. Attach the second Weight Plate to Top Plate (#31) using:

one M10\*190 HHB (#93) (250LBS) one M10\*135 HHB (#92) (170LBS) two Φ11\*Φ20\*1.5 Washer (#73) one M10 Nylon lock Nut (#71)

! There are two configuration of weights: 250LBS(sixteen 15LBS Weight Plate) and 170LBS(sixteen 10LBS Weight Plate), please see following form for details.

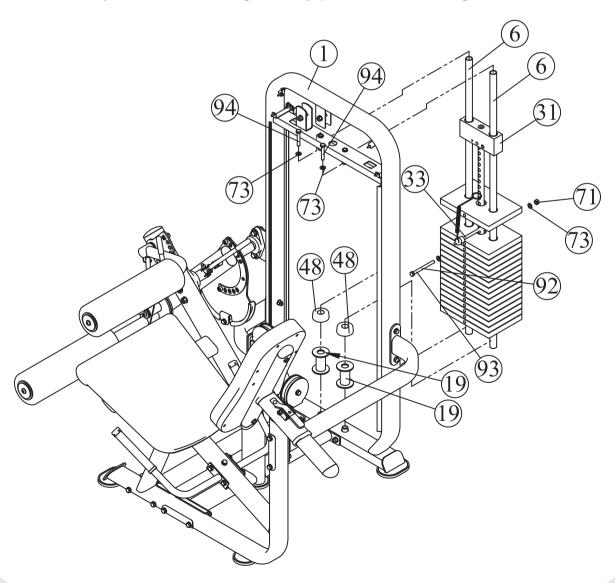


### Step 5

- 1. Attach the Cable (#45) to the Top Plate (#31).
- 2. Attach one 4.5" Pulley (#43) to the Weight Stack Frame (#1) top side. using: one M10\*50 HHB (#62) two Φ11\*Φ20\*1.5 Washer (#73) one M10 Nylon lock Nut (#71)
- 3. Attach one 3.5" Pulley (#44) to the Weight Stack Frame (#1) top side. using: one Pulley Prevent Bracket (#30) one M10\*50 HHB (#62) two Φ11\*Φ20\*1.5 Washer (#73) one M10 Nylon lock Nut (#71)
- 3. Attach one 4.5" Pulley (#43) to the Weight Stack Frame (#1) bottom side. Using:
  one M10\*50 HHB (#62) two Φ11\*Φ20\*1.5 Washer (#73)


one M10\*50 HHB (#62) two Φ11\*Φ20\*1.5 Washer (#73 one M10 Nylon lock Nut (#71)

- 4. Attach one 4.5" Pulley (#43) to the Bottom Cross Brace (#8) using: one M10\*50 HHB (#62) two Φ11\*Φ20\*1.5 Washer (#73) one M10 Nylon lock Nut (#71)
- 5. Attach two 4.5" Pulleys (#43) toFront Frame (#7) using: two M10\*50 HHB (#62) four Φ11\*Φ20\*1.5 Washer (#73) two M10 Nylon lock Nut (#71)
- 6. Attach the Cable (#45) end to Cable Cam (#5) using: one Φ10\*Φ14\*20 Bushing (#89) one M10\*45 HHB (#61) two Φ11\*Φ20\*1.5 Washer (#73) one M10 Nylon lock Nut (#71)

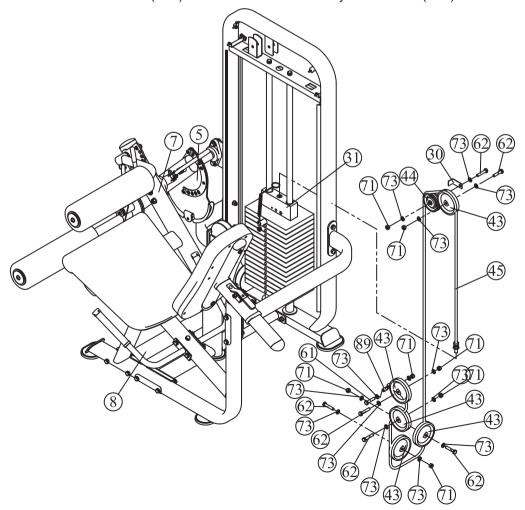

# Step 6

- 1. Attach the Bottom Front Shroud (#36) and the Bottom Rear Shroud to the Weight Stack Frame (#1).
- 2. Attach the Top Front Shroud (#38) to the Weight Stack Frame (#1) using: four M5\*15 PHPS (#70)
- 3. Attach the Top Rear Shroud (#39) to the Weight Stack Frame (#1) using: four M5 U-Style Tapped Hole Nut (#91) four M5\*15 PHPS (#70)

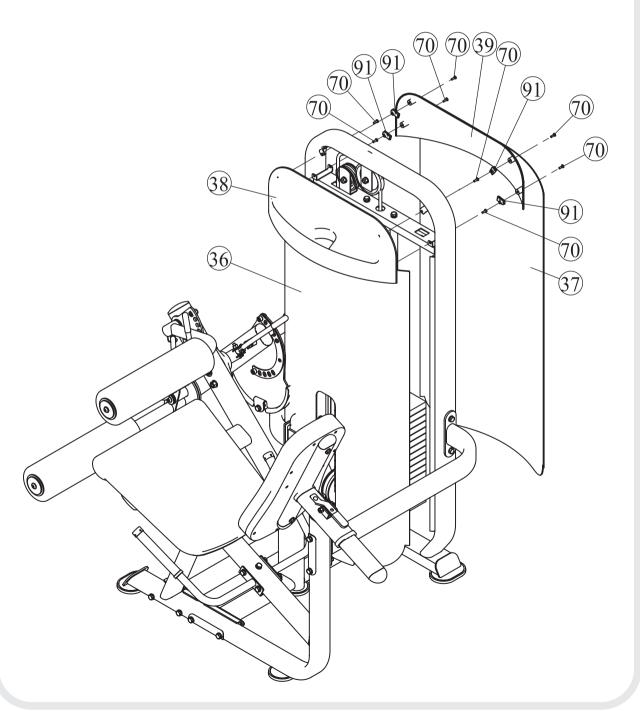

# **Exercise Instructions**



# **SET UP**

- 1 Select an appropriate weight.
- 2 Adjust back pad to the desired position.

### **EXERCISE**

### •Leg extension:

Adjust leg arm to desired lower position, hook both ankles under the roller pad, then extend legs outward.

### • Leg curl:

Adjust leg arm to desired higher position, place both ankles on the top of the roller pad, then curl legs inward.

Pause slightly then slowly return to the starting position.

(Adjust weight according to the select pin)

# **Specifications**

Class: S

Maximum Wt. Capacity: 113Kg/ 250lbs. Maximum Load of Trainer: 150Kg/ 330lbs.

# Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY					
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

# **General Maintenance Information**

### Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- \*Check all pieces for signs of visible wear or damage.
- \*Check springs in snap hooks and pull-pins for proper tension and alignment.
- \*If the spring sticks or has lost its rigidity, replace it immediately.

### **Upholstery:**

- \*To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- \*Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- \*Replace ripped or warn upholstery immediately.
- \*Keep sharp or pointed objects clear of all upholstery.

### Decals:

\*Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

### **Nuts and Bolts:**

- \*Inspect all nuts and bolts for any loosening and tighten if needed.
- \*Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

### **Anti-Skid Surfaces:**

\*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

### **Belts and Cables:**

- \*We uses only high quality belt, and mil-spec cables.
- \*Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- \*While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- \*Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

### **Belt and Cable Tension:**

- \*Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- \*Check slack in cables and re-adjust cable tension if needed.

### Seat Sleeves, Guide Rods:

- \*Wipe down adjusting tubes with a dust free rag before applying lubricant.
- \*Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

### Linear Bearings:

\*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks, repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

### PLEASE KEEP THIS FOR YOUR RECORDS

# **Weight Training Tips**

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight.

Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







